

K335S8 50*50mm Double Board Wiring Manual v4.0

Interface definition:

Default factory configuration:

IP: 192.168.1.168

PW: 123456

Rtsp://192.168.1.168/stream_0

Fill light interface:

1. Infrared LED+
2. Infrared LED-
3. White light LED+
4. White light LED-

MIC interface:

1. MIC+
2. MIC-

Function interface:

- 1.WG_IN0
- 2.WG_IN1
- 3.GND
- 4.WG_OUT0
- 5.WG_OUT1
- 6.GND
- 7.Reset
- 8.GND
- 9.Alarm IN
- 10.Relay NO
- 11.Relay COM
- 12.Relay NC
- 13.RS485_A
- 14.RS485_B

IR-CUT interface:

- 1.IR-CUT 1
- 2.IR-CUT 2

Infrared light board interface:

- 1.Light board control signal input
- 2.GND
- 3.Constant Current IC PWM

Debug interface:

1. 3V3
2. UART0_TX
3. UART0_RX
4. GND

Speaker interface:

1. SPK+
2. SPK-

USB Interface:

1. 5V Out
2. USB_DM
3. USB_DP
4. GND

Network power interface:

- 1.DC12V
- 2.GND
- 3.RJ45_1(TX+)
- 4.RJ45_2(TX-)
- 5.RJ45_3(RX+)
- 6.RJ45_4(RX-)
- 7.Link Lamp
- 8.ACT Lamp

Auto IRIS Lens Interface:

1. Driver-
2. Driver+
3. Damp+
4. Damp-

